


# Post Cap

## INSTALLATION INSTRUCTIONS

Please review ALL diagrams and instructions in full prior to beginning installation.

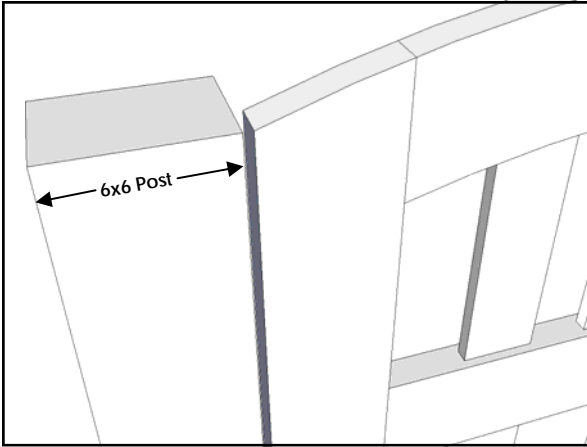

### POST CAP INSTALLATION

*Install post cap before gate and hinges are installed.*

### CEDAR TRIMMED POST CAPS

Attach to top of post using construction adhesive or by drilling pilot holes and nailing through the molding.

### FINISHING INSTRUCTIONS

NOTE: Wood expands and contracts across the grain. To reduce this naturally occurring tendency and prevent potential problems finish your post caps prior to installation.

### STAIN FINISHING

Immerse cap in quality exterior penetrating oil such as Penofin or Cabot's Australian Timber Oil. It is necessary to finish both inside and outside of the cap. Follow coating manufacturer's directions.

### PAINT FINISHING

Prime inside and outside of cap with alkyd oil base primer or stain blocking acrylic primer. Finish cap with exterior alkyd oil or acrylic house paint; two final coats is best.

